

POWERTEC®

Band Saw Fence



The 72260 Fence is designed to work with **POWERTEC** Straight Edge Clamps, or similar products (sold separately), to attach to the table.

WARNING

For your own safety, read the machine's instruction manual before using any accessory. Failure to heed these warnings may result in serious personal injury and damage to the tool and the accessory.


- Before using the Band Saw Fence, read and follow all instructions and safety information provided.
- Always keep hands clear of the blade, cutter, sanding disc/belt.
- Ensure knobs are tight before using.
- **To avoid accidental start-up**—Make sure machine is in the "OFF" position before plugging in.

UNPACKING CONTENTS

NOTE: Check for shipping damage. Check immediately whether all parts and accessories are included.

ITEM	DESCRIPTION	QTY
A	16" Fence with Thread Ring	1
B	M6 Rubber Tipped Hex Set Screws	2
C	Knob 1/4"-20	4
D	Washer	4
E	T-Bolt 1/4"-20 x 1"	4
F	M3 Hex Wrench	1

Figure 1

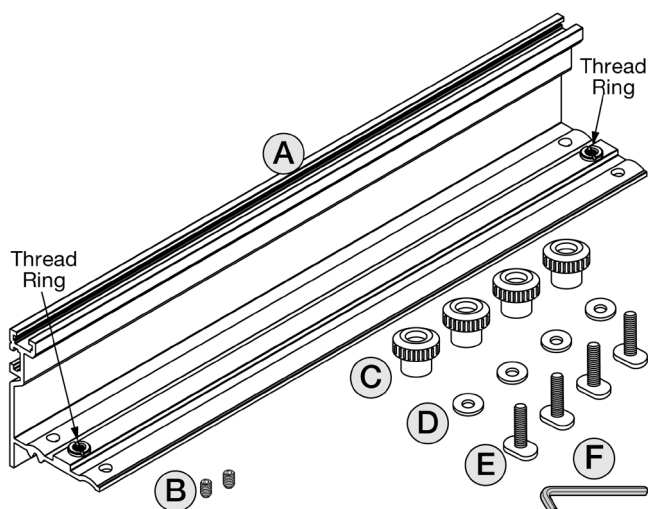


WARNING

To avoid serious personal injury and damage to the product, unplug the machine before attaching or adjusting the Band Saw Fence.

DIMENSIONS


Figure 2

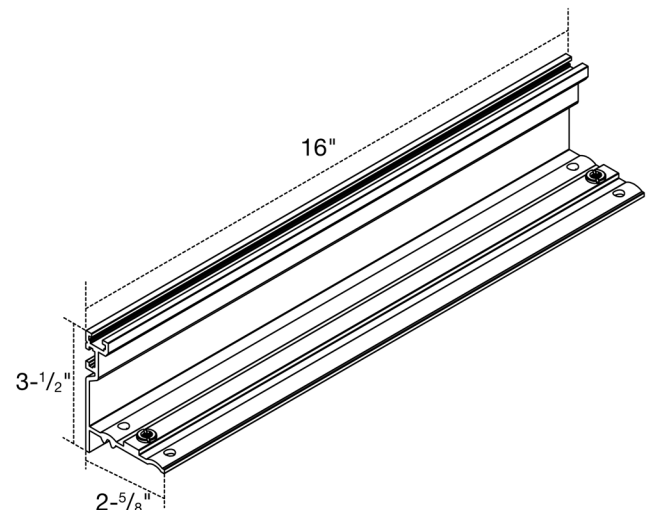

ASSEMBLY

- Insert 2 Set Screws (B), with rubber tip facing down, into the thread rings in the Fence. Thread the set screws until the screw tip aligns with the bottom of the thread ring.
- From the bottom of Fence, insert T-bolt (E) through the hole. Place Washer (D) and thread on Knob (C). Do not tighten at this time.
- Repeat to mount all the T-bolts, Washers and Knobs.

Figure 3

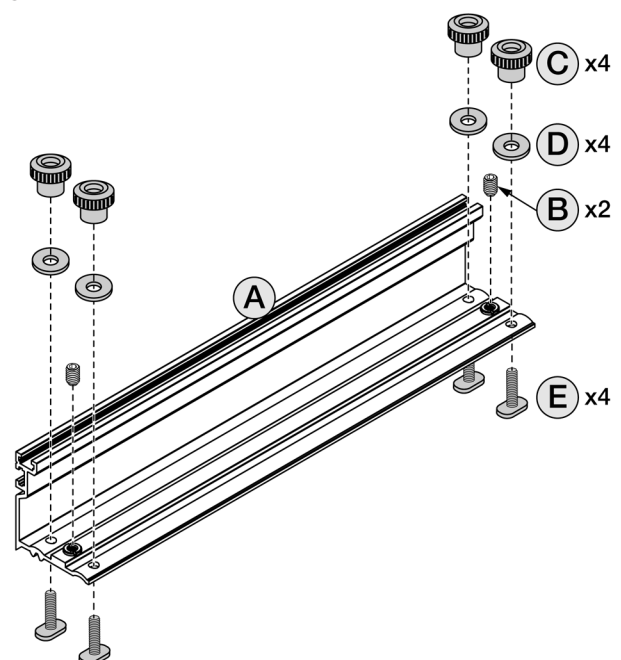

Attach Fence to Band Saw Table:

NOTE: The **72260 Fence** is designed to work with and requires a Straight Edge Clamp, such as **POWERTEC Contractor Straight Edge Clamp 71705 (24")**, or similar product (sold separately), to attach to the table.


Slide T-bolts into slots of straight edge clamp (sold separately).

Figure 4




- [1] Place Fence Assembly and Straight Edge Clamp onto band saw table.

Figure 5

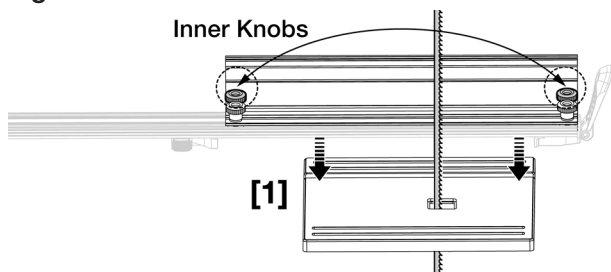


- [2] Adjust Straight Edge Clamp to fit band saw table.
 [3] Press down Straight Edge locking lever to secure in place.
 [4] Move Fence to desired position—tighten two inner Knobs.

Figure 6

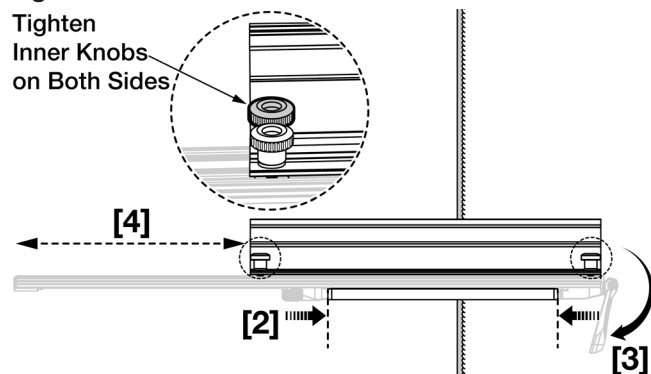

Using a Square, Set Band Saw Fence Perpendicular To Table Base.


Figure 7

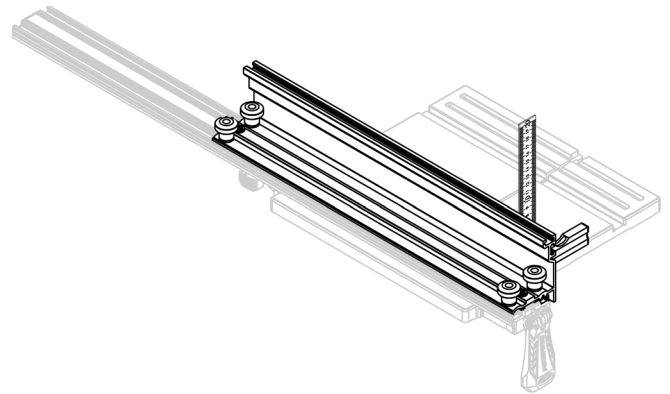

If Fence is Leaning Right:

- [1] Turn the 2 outer Knobs clockwise and stop when Fence is perpendicular to the band saw table at both ends of the Fence. Do not tighten at this time.


Figure 8

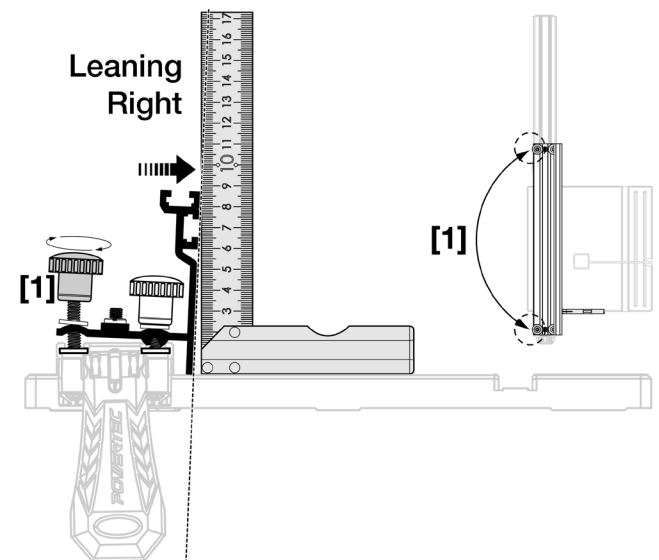

- [2] Use M3 Hex wrench (F) to fasten 2 set screws (B) until rubber tip is firmly against top of straight edge clamp.

- [3] Tighten the 2 outer Knobs.


Figure 9

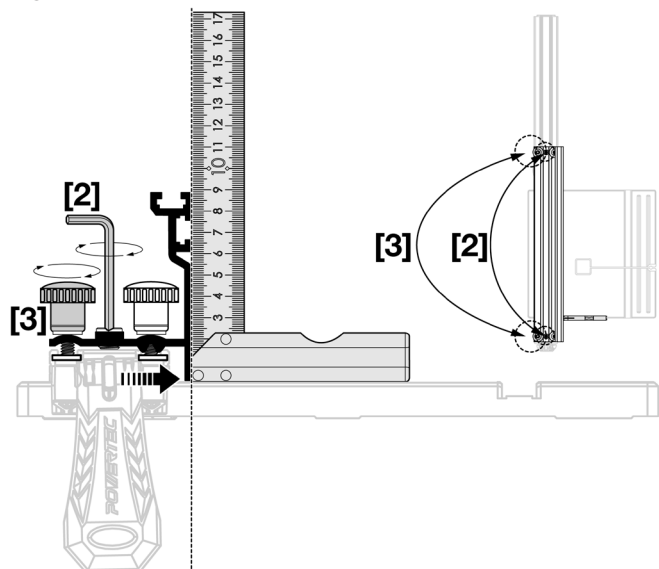

If Fence is Leaning Left:

- [1] Use M3 Hex Wrench (F) to thread clockwise the 2 Set Screws (B). Stop when Fence sets perpendicular to the band saw table at both ends of the Fence. Do not tighten at this time.


Figure 10

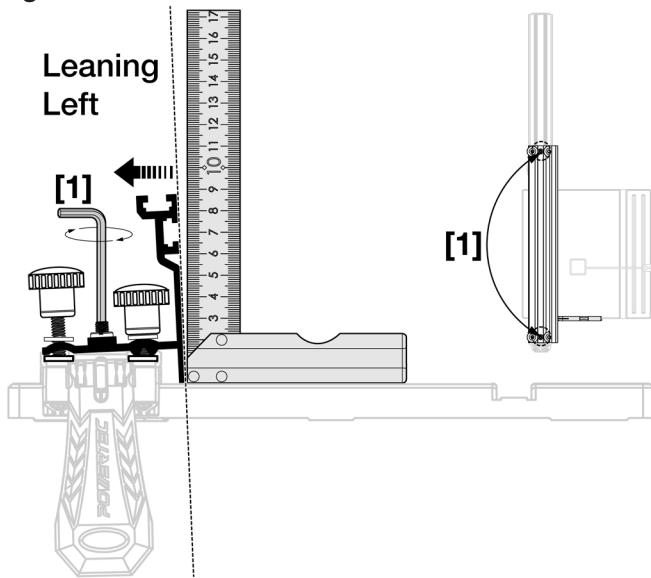

- [2] Tighten the 2 outer Knobs.

- [3] Tighten the 2 Set Screws.

Figure 11

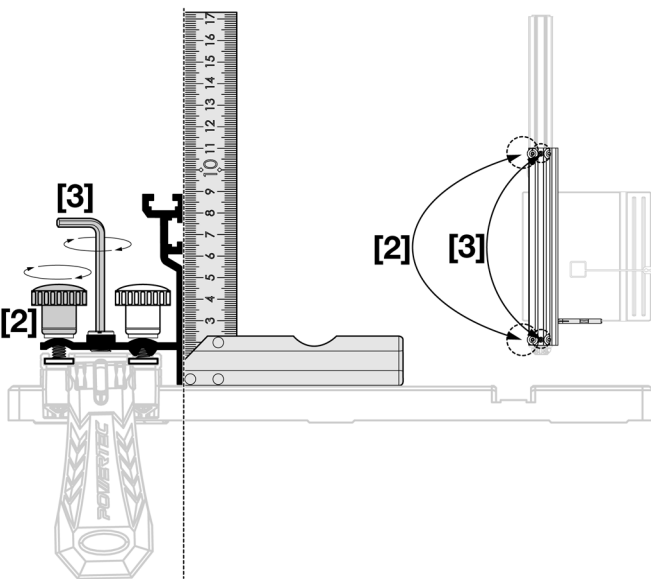

OPERATION

Figure 12


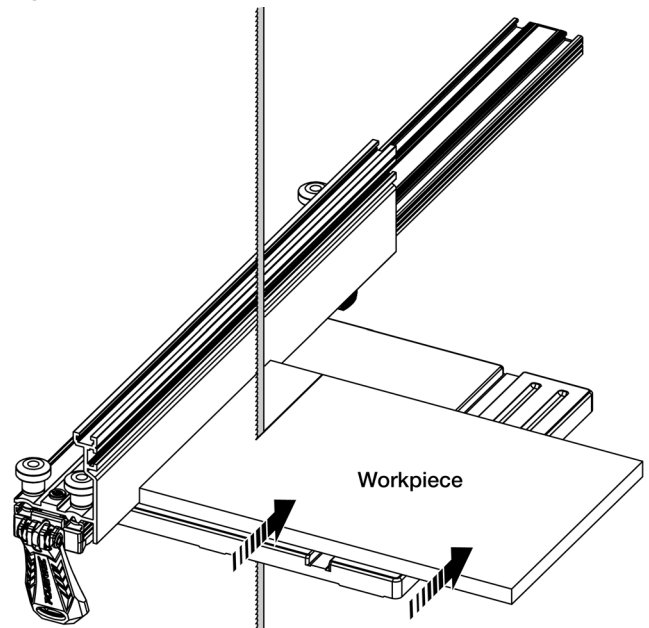


Figure 13

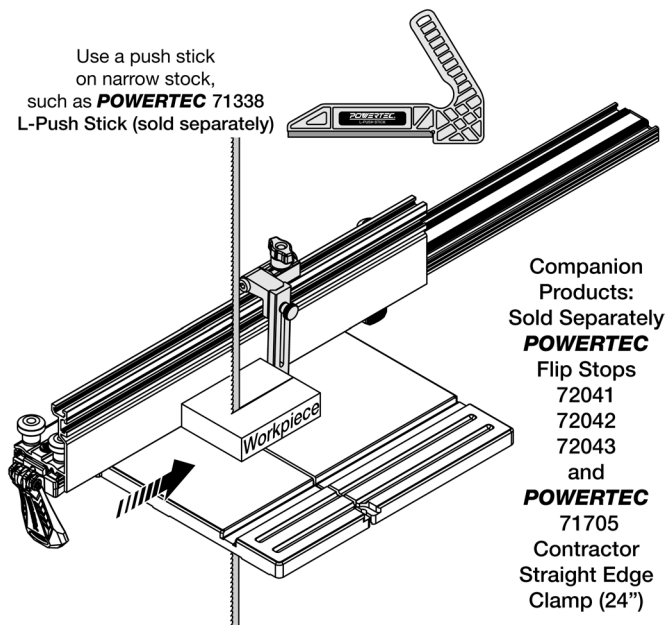

GENERAL MAINTENANCE

⚠ WARNING

When servicing, use only identical replacement parts. Use of any other parts may create a hazard or cause product damage. To ensure safety and reliability, all repairs should be performed by a qualified service technician.

⚠ WARNING

Keep the Band Saw Fence dry, clean, and free from oil and grease. Always use a clean cloth when cleaning. Never use brake fluids, gasoline, petroleum-based products or any strong solvent to clean the Band Saw Fence. Chemicals can damage, weaken or destroy plastic which may result in serious personal injury.

Visit us on the web at **www.powertecproducts.com**



Put these instructions and the original sales invoice
in a safe, dry place for future reference.

Southern Technologies, LLC • Chicago, IL 60606