
# POWERTEC.

### **Magnetic Switch (220–240 V)**

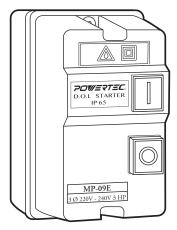



### **A**WARNING

Read and understand the instructions before installing this switch.

### **SPECIFICATIONS**

oltage Rating	/
Rated Current Amperage 8–12 A	4
Phase	3
lorsepower	3

#### **UL** Approved

**IMPORTANT:** This magnetic switch toggles a motor ON and OFF. If the motor operating temperature gradually increases due to heavy workloads or a phase loss is detected, the switch provides protection to the motor.

**NOTE:** The thermal overload/phase loss relay inside is not designed to cut power in the event of a sudden motor overload or stall. The magnetic switch MUST be connected to a properly sized power supply circuit with a correct fuse or circuit breaker to help protect the motor against sudden motor overload or stall.

**OPERATION:** The green push button switch allows current to go to the magnetic coil which pulls the contactor closed. Main current now passes through the thermal overload/phase loss relay and then to the motor. This relay monitors motor current draw. If the motor begins to overheat or a phase loss is detected, the relay breaks the magnetic field, which opens the contactor and cuts current to the motor. The red push button breaks the magnetic field, which opens the contactor and disconnects the current to the motor.

## SAFETY INSTRUCTIONS A WARNING

To reduce risk of serious burns, electrocution or death when installing this switch:

- This switch is to be used to replace an existing machine switch with the same physical configuration, equivalent electrical specifications and ratings.
- The installation of this switch MUST be performed by an electrician or qualified service personnel in accordance with all national and local electrical codes.
- This switch MUST be installed on an electrical circuit with a verified machine ground, correct voltage and adequate fuse protection.
- Before installing the switch, TURN OFF AND COMPLETELY DISCONNECT ALL POWER SOURCES to the machine.
- DO NOT use this switch in damp or wet locations. DO NOT use this switch near explosive fumes or flammable liquids. It is not sealed or rated for these environments.

## SAVE ALL WARNINGS AND INSTRUCTIONS FOR FUTURE REFERENCE


### **AWARNING**

 This switch MUST be installed on an electrical circuit with a verified machine ground. In the event of certain malfunctions or breakdowns the grounding reduces the risk of electric shock by providing a path of least resistance for electric current.

#### To Install

See the *Wiring Diagram* to properly install the switch.

### WIRING DIAGRAM

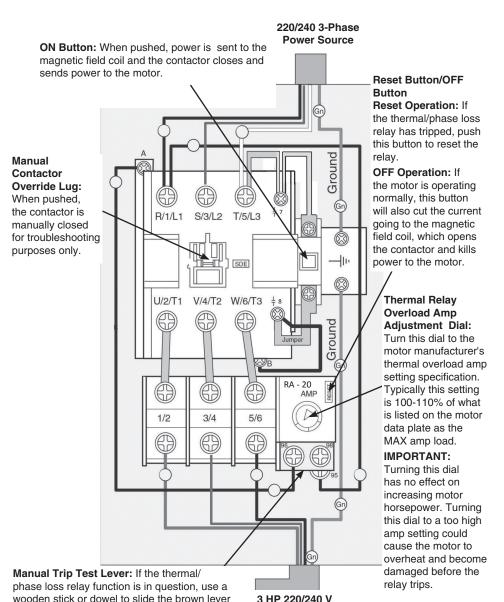

#### Visit us on the web at powertecproducts.com



to the right. If the motor shuts off, the thermal

relay has tripped and is functional. If the motor keeps running, the themal relay needs to

be replaced.

Put these instructions and the original sales invoice in a safe, dry place for future reference.

Motor

Southern Technologies, LLC Waukegan, IL 60087