INSTRUCTION SHEET **Model No. BS900RF**

POWERTEC®

Rip Fence for POWERTEC BS900 Wood Bandsaw and Similar Bandsaws with a Work Table Size of 11-1/8" to 11-13/16"

QUESTION...
1•847•780•6120

⚠WARNING

To reduce the risk of injury, turn bandsaw off and disconnect it from power source before installing and removing accessories. An accidental start-up can cause injury.

⚠WARNING

For your own safety, read and follow all safety procedures listed in the bandsaw instruction manual.


SET UP

NOTE: This fence WILL NOT work with table tops thicker than 9/16", table saws or other saws requiring guide rails.

IMPORTANT: This fence clamps directly on the edge of the work table, no guide rail is needed. The fence may not clamp correctly if flashing is located along edge of the work table, remove any flashing with a file before using the fence.

- Raise the fence locking lever and place the rip fence on the work table with the fence locking lever at the front of the work table.Position the fence in the desired location.
- Lower the fence locking lever to lock the rip fence in position on the work table.

Figure 1

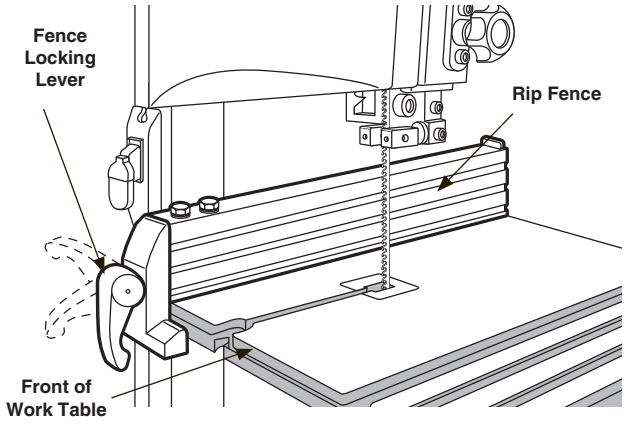


.

ADJUSTMENTS

NOTE: The fence clamps directly to the table providing support for your ripping applications – no rails are required. The fence can be adjusted from 11-3/8" to 12". Turn counter clockwise to increase the length and clockwise to decrease the length (shorten).


- If the fence is too loose or tight, raise the locking lever and turn it clockwise to tighten and counter clockwise to loosen.
  - Once proper tension is set, press the head of the fence against the front of the table and lower the fence locking lever to lock the rip fence in position.

Figure 2

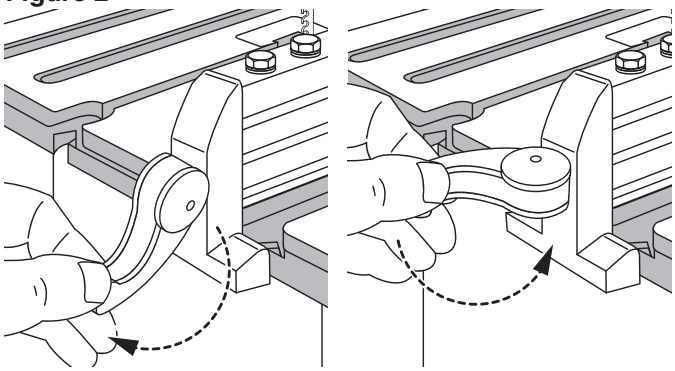


- If the fence is not parallel to the blade or needs to be moved to correct blade drift, it can be adjusted by loosening the two screws on top of the fence.

Figure 3

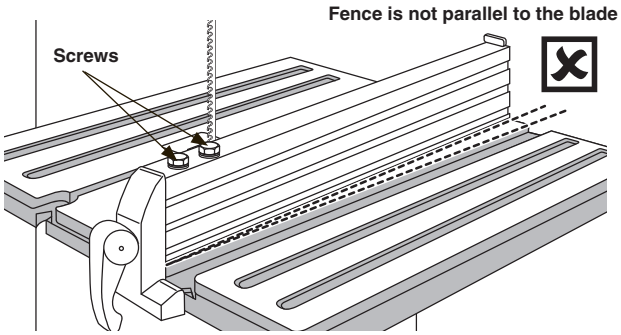

- Raise the locking lever to unlock the fence, press the head against the table to make sure it is square to the table.
- Loosen the two screws on top of the fence.
- Move the fence the required amount. Use the miter slot as a guide to make sure the fence is parallel to the blade.
- Tighten the two screws
- Lower the fence locking lever to lock the rip fence in position. Check the fence for proper alignment.

Figure 4

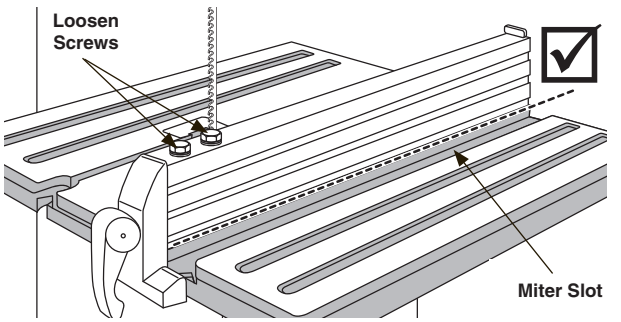

Visit us on the web at **powertecproducts.com**

Put these instructions and the original sales invoice in a safe, dry place for future reference.

Southern Technologies, LLC
Waukegan, IL 60087

21-0107