

POWERTEC**T-Track Plastic Insert with Scale,
Left to Right**

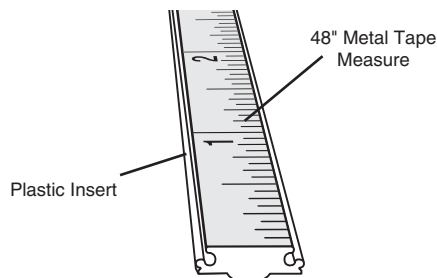
The Powertec 71331 T-Track Plastic Insert with Scale, Left to Right, adds accuracy to out-feed tables, assembly fixtures, router fences, drill press fences, movable fences, or any other applications requiring a T-Track. (sold separately)

PACKAGING CONTENTS

- 1– 48" Plastic insert
- 1– 48" Metal tape measure with adhesive backing
- 1– Clear acrylic cursor with hairline indicator

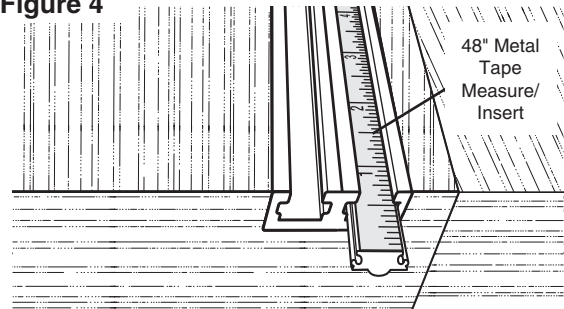
ASSEMBLY

1. Remove the protective backing from the 48" metal tape measure and carefully place it into the flat section of the plastic insert.

Figure 3

2. Slide the metal tape measure insert into the required side of a T-Track (sold separately). **NOTE:** The plastic insert and metal tape measure may be cut to fit your applications.

NOTE: The plastic insert is designed to slide in and out of a T-Track as needed. If the insert is too loose for your application, a piece of tape can be applied to the bottom of the insert or to the inside of the track to "snug" up the fit.

Figure 4**Shown used with the 71133 Double Top T-Track**

3. A clear acrylic cursor with adhesive backing is included; it can be attached to stops or other T-Track accessories (sold separately) to fit your applications.

Visit us on the web at www.powertecproducts.com



Put these instructions and the original sales invoice in a safe, dry place for future reference.

Southern Technologies, LLC
Waukegan, IL 60087